

How do I play a recorded file?

Note: The DP-S1, DP-P1 and DP-H1 can play various file formats for movies, photos and music from DVD (S1 only), the internal hard drive (S1 & P1), external hard drive, memory card and via network. Two or more Beyonwiz devices can even view each others files via the network. The following formats are officially listed as supported:

Movie	wmv, avi, mpg, vob, mp4, asf, tp, trp
Music	mp3, wma, aac, ac3
Photo	bmp, jpeg, png

There is an unofficial list available on the Beyonwiz Forum at this link <http://www.beyonwiz.com.au/phpbb2/viewtopic.php?t=319>

1. Switch on the Beyonwiz PVR and wait for a picture to show on the screen. If a picture doesn't appear, your PVR may need to scan your channels first – See "How do I do a Channel Scan?"
2. Press the **FILE PLAY** button (next to **LIVE**) on the remote to bring up the **Media Player**.
3. Press the **◀▶ ARROW** keys to move between **Movie**, **Music** and **Photo** (listed top left)
4. Press the **▲▼ ARROW** keys to move between **HDD**, **Network USB** and **Memory Card**.
5. To play a recorded file from the internal HDD, use the **◀▶ ARROW** keys to highlight **Movie** and the **▲▼ ARROW** keys to highlight **HDD**.

Press **OK** to highlight **recording** and **OK** to open the **recording** folder and use the **▲▼ ARROW** keys to highlight the file you want to view and press **OK** on the remote. The file should start playing.



6. Use the **◀▶ ARROW** keys to scroll forward and backwards through the file.
7. Use the **PAUSE** button on the remote to pause the playback. Use the **PAUSE** button to resume viewing. **Pause** is displayed on the screen (top right hand side).
8. Use the **STOP** button on the remote to stop playing the file.

*Note: You can also use the **FF** and **REW** and **SLOW FWD** buttons to move through the file. The **PLAY** button resumes normal play time. The **▲▼ ARROW** buttons will do **10%** jumps through the file.*

If you have recorded files on an external HDD, Network or Memory Card, you can follow step 5 to play the file, but instead of selecting HDD, select Network, USB or Memory Card.

