

## How do I edit a file?

*Note: You may find once you start recording programs that you have to start them earlier than the scheduled start time, and set the end time to later than the scheduled finishing time. This 'padding' can use up lots of HDD space when you have a lot of programs recorded. This tutorial will show you how to edit the file so it has what you want.*

1. Switch on the Beyonwiz PVR and wait for a picture to show on the screen.
2. Press the **FILE PLAY** button (next to **LIVE**) on the remote to bring up the **Media Player**.
3. Use the **◀▶ ARROW** keys to highlight **Movie** and the **▲▼ ARROW** keys to highlight **HDD** and press **OK**
4. Press the **OK** to select the **recording** folder and then the **▲▼ ARROW** keys to highlight the file you want to edit and press **OK** to start playing it.
5. Use the **ARROW** keys to navigate to the point in the file you want the edit to start from and press the **YELLOW A-B** button. This will place an '**A**' marker at that point in the file.
6. Use the **ARROW** keys to navigate to the point in the file you want the edit to end and press the **YELLOW A-B** button. This will place a '**B**' marker at that point in the file and the progress will jump back to marker '**A**'
7. Press the **POP-UP** button and select one of the options.



Delete A -> B	Will delete between the A and B marker
Keep A -> B only	Will keep between the A and B marker and delete everything else
Copy A -> B to a new file	Will copy between A and B markers to a new file
Cut out A -> B to a new file	Will cut out (remove) between A and B markers to a new file

8. A Deleting message will appear while the file is edited based on the selection.

*Note: Try all of the options out on a file you have already watched and don't want to keep.*