

# How do I format the HDD?

*Note: The DP-S1 and DP-P1 have internal Hard Drives; the DP-H1 can use an external USB HDD.*

*You may need to format the hard drive if your PVR is new and has never been setup before, if the hard drive has been replaced, or if you are setting up an external USB HDD for exclusive use with the PVR.*

**Formatting the hard drive will erase EVERYTHING on the drive.**

1. Switch on the Beyonwiz PVR and wait for a picture to show on the screen.
2. Press the **SETUP** button on the remote and use the **◀▶ ARROW** keys on the remote to navigate to the **System** option on the top bar.
3. Use the **▲▼ ARROW** keys to move to **HDD** in the side menu and press **OK**.
4. Use the **▲▼ ARROW** keys to move to **HDD Format** and press **OK**.



5. Use the **◀▶ ARROW** keys on the remote to select **Yes** and press **OK** to the **HDD Format warning**.
6. The Hard Drive will now format.

*Note: You can also **Format USB HDD** for exclusive use with the PVR, **Check HDD** for damage, and get **HDD Information** by selecting the other menu options.*



FOR MORE DETAILED INFORMATION REFER TO PAGE 100 OF THE MANUAL