

# What is firmware and how do I update it?

*Note: Firmware is the Operating System for the Beyonwiz PVR*

*Updates are often released to improve functionality or resolve issues and are very simple to perform on a Beyonwiz PVR.*

*You can download the latest firmware version from the Beyonwiz website [www.beyonwiz.com.au](http://www.beyonwiz.com.au) under downloads.*

1. Visit the Beyonwiz website and download the latest firmware for your PVR.
2. Decide how you want to transfer the firmware to your PVR and save the firmware onto that media. You can use either:
  - Network
  - USB Key or USB External Hard Drive
  - Media Card (i.e. SD, CF)
3. If you selected USB or Media Card, connect this media to the Beyonwiz and switch on the Beyonwiz PVR and wait for a picture to show on the screen.
4. Press the **SETUP** button on the remote and use the **◀▶ ARROW** keys on the remote to navigate to the **System** option on the top bar.
5. Use the **▲▼ ARROW** keys to move to **Firmware** in the side menu and press **OK**.
6. Use the **▲▼ ARROW** keys to move to **Firmware Upgrade** and press **OK**.
7. Use the **▲▼ ARROW** keys to select the media you chose in step 3 and press **OK**.
8. Use the **▲▼ ARROW** keys to navigate to the firmware file you saved onto the media and press **OK** to select it.
9. Use the **◀▶ ARROW** keys on the remote to select **Yes** and press **OK** to the **Firmware Upgrade** warning.
10. The firmware upgrade will begin and you will see a progress bar for the **Erasing** and **Upgrade** processes and when complete you will see a notice that the **Firmware Successfully Upgraded**.
11. Press **OK** to the **Firmware Successfully Upgraded** notice and the PVR will switch off.
12. Switch on the Beyonwiz PVR and wait for a picture to show on the screen.
13. Press the **SETUP** button on the remote
14. Using the **◀▶ ARROW** keys on the remote, navigate to the **System** option on the top bar.
15. Use the **▲▼ ARROW** keys to move to **Firmware** in the side menu and press **OK**.
16. Use the **▲▼ ARROW** keys to move to **Firmware Information** and press **OK** to see the updated firmware information. Press **LIVE** to return to normal viewing.



Firmware Information	
System Id	0808 0000 0A22 BE3C
Firmware Version	DPP1-01.05.197
Loader Version	1.0.14.1.8

FOR MORE DETAILED INFORMATION REFER TO PAGE 97 OF THE MANUAL